

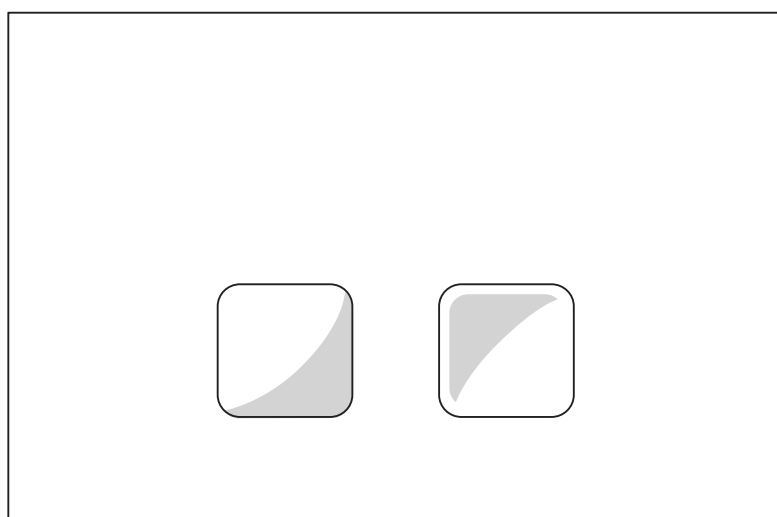
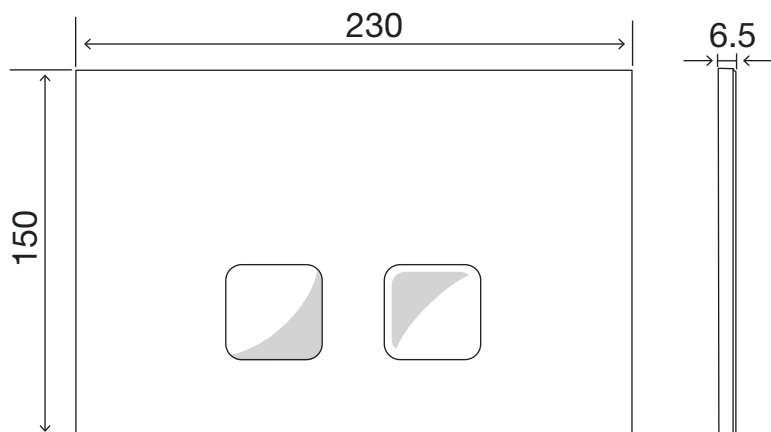
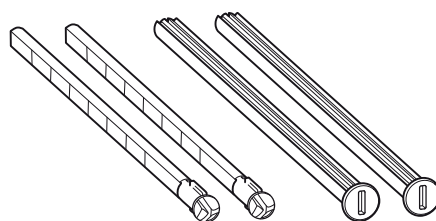



Hudson Reed


Placa de Descarga para WC

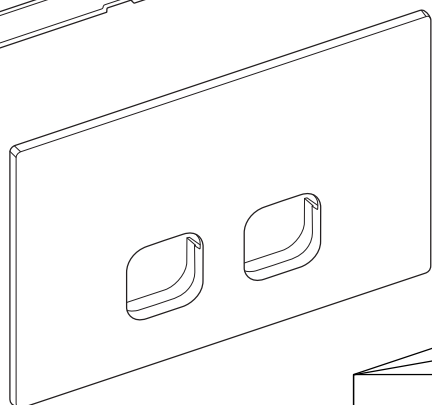

Guía de Instalación

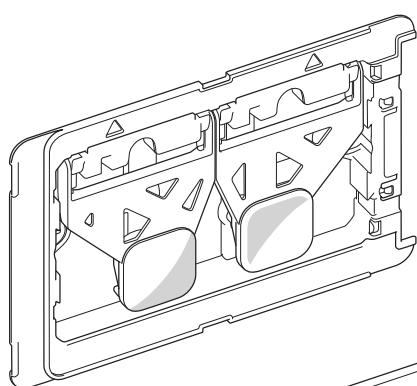



KIT SUPERIOR

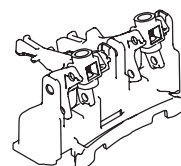



Cod. 211743

EXPERT PLUS



ALTO

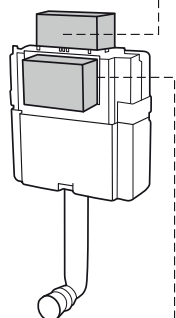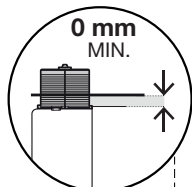



OLI74 PLUS

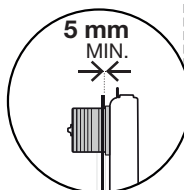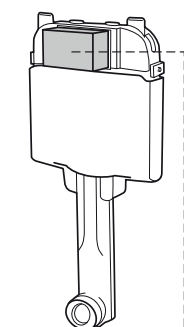


QUADRA PLUS

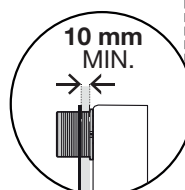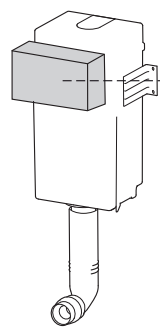

OLI120 PLUS

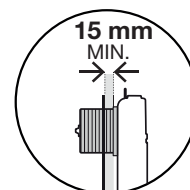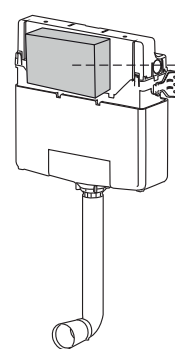


FRONTAL

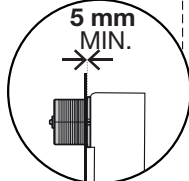


1

FRONTAL

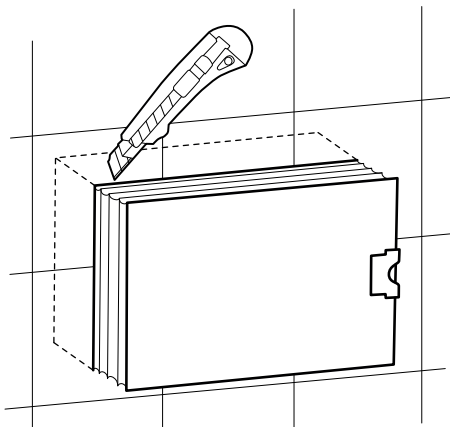


1

ALTO

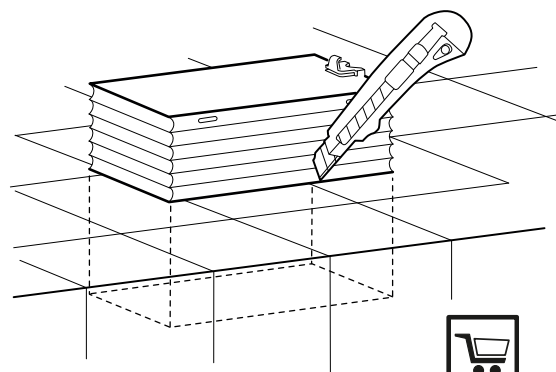


KIT SUPERIOR
KIT Cod. 211743

2

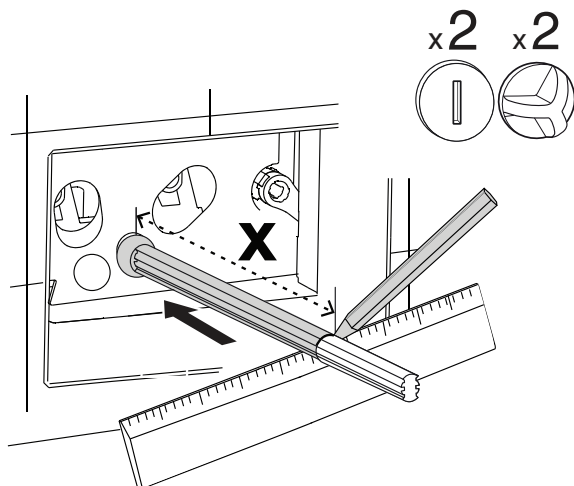


3

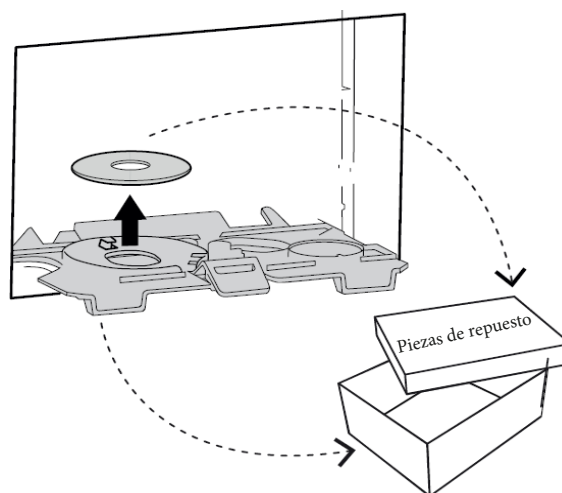

4


FRONTAL

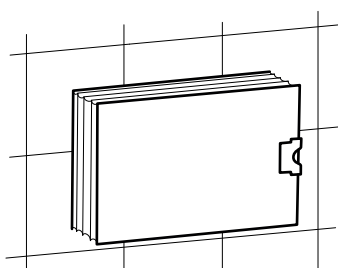

x2




← X + 10mm →

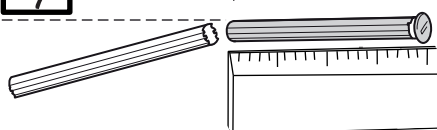

x2




← X + 30mm →

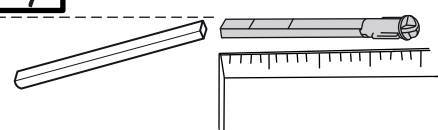


4


ALTO

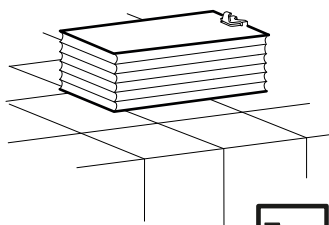

KIT SUPERIOR
Cod. 211743



x2




x2



ALTO




KIT SUPERIOR

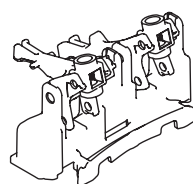

Cod. 211743




ALTO

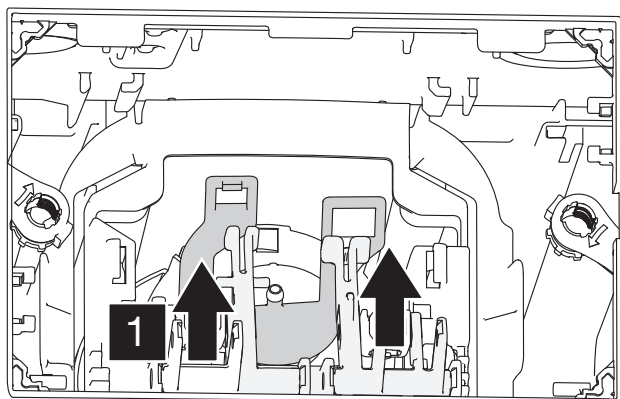



2

PULSE


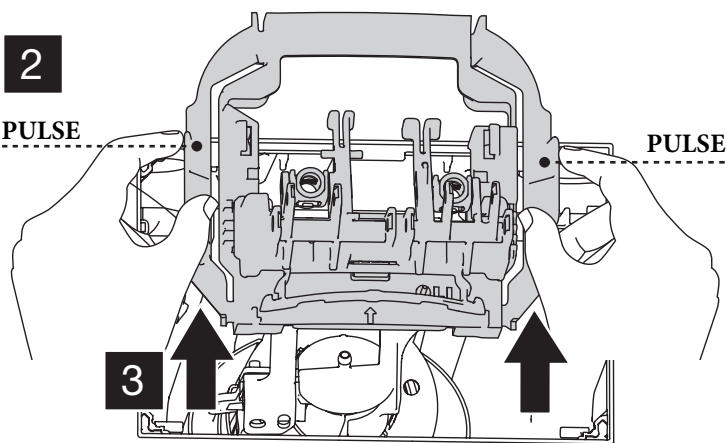


PULSE

i ALTO

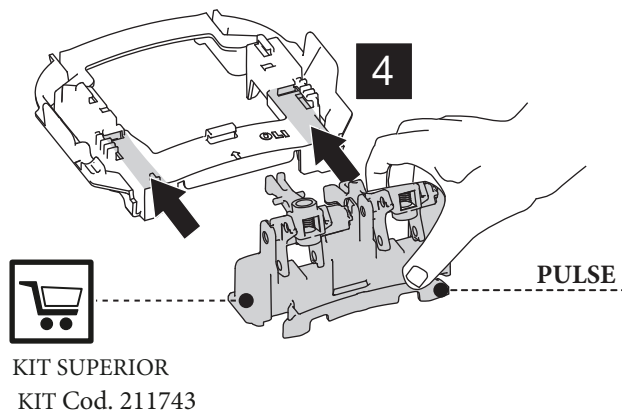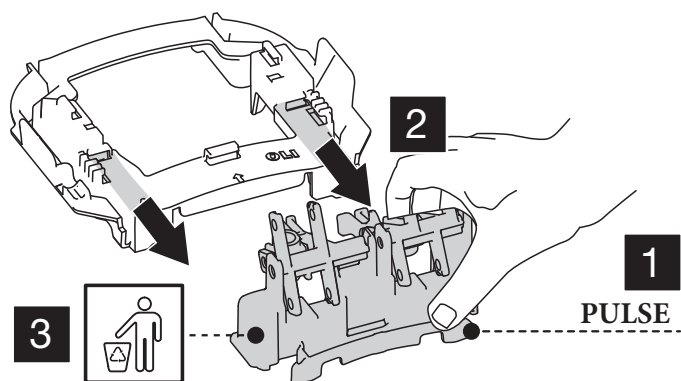

i ALTO

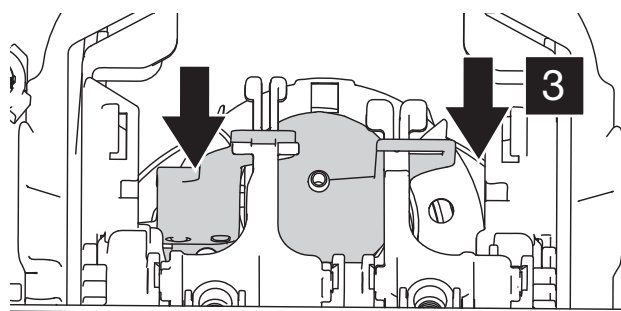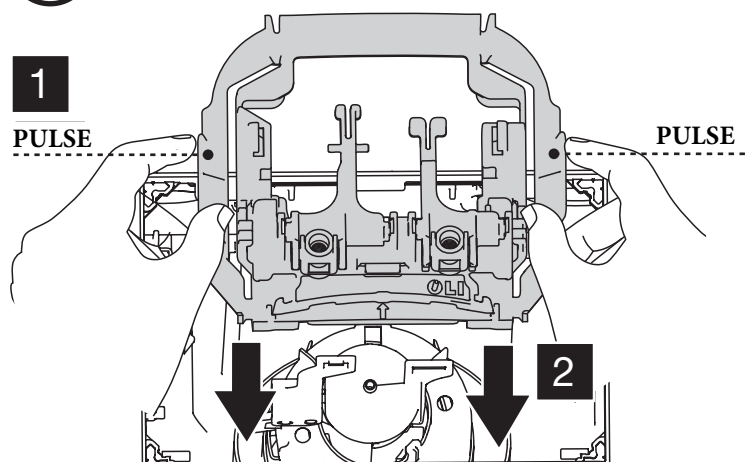

6

